

Manuale d'istruzioni
User's Guide
Bedienungsanleitung
Manuel d'utilisation
Manual de instrucciones
Manual de instruções
Gebruikershandleiding
Användarinstruktioner
Oŏnyiɛç xpńonç
Käyttäjän Opas
Instrukcja użytkowania
Felhasználói útmutató
Руководство пользователя
Navodila za uporabo

↑ WARNING

CAREFULLY READ THIS INSTRUCTION MANUAL BEFORE USE, AND KEEP IT FOR FUTURE REFERENCE.

INTRODUCTION

Congratulations. You have purchased one of the finest, most dependable BCs available in the world today. The end result of years of "evolutioneering", your Mares BC uses processes and materials that are the result of thousands of hours of research. This means reliability, a feature that's in high demand and found in EVERY Mares product.

Any critical information or warnings that might affect the performance or result in the injury or death of the BC owner or other persons are highlighted with the following symbols:

A DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

↑ WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

∧ CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

IMPORTANT:

Should any warnings or information contained in this manual be unclear on not fully understood, please contact Mares before using a Mares BC.

MARNING

Carefully follow these and all the other instructions concerning your Mares BC and all other SCUBA equipment. Failure to do so could lead to serious injury or death.

∧ WARNING

As with all SCUBA equipment, Mares BCs are designed to be used by trained, certified divers only. Failure to fully understand the risks of using such equipment may result in serious injury or death. DO NOT use this BC or any SCUBA equipment unless you are a trained, certified SCUBA diver.

EN 250:2000 CERTIFIED BC

The PPE (Protective Personal Equipment) described in this instruction manual has been subjected to type approval testing and certified in accordance with the EN 250:2000 standards (D.e. 89/686/EEC category III, as harness for SCUBA) and EN 1809 (D.e. 89/686/CEE category II, as buoyancy compensator) by Registered Test Center n° 0474 RINA, Via Corsica 12 16128 GFNOVA ITALY.

Model	EN 250:2000	EN 1809	Marking	
DRAGON AT MRS PLUS	0474	0474	CE0426	
KAILA AT MRS PLUS	0474	0474	CE0426	
HYBRID AT MRS PLUS	0474	0474	CE0426	•••••
PRESTIGE AT MRS PLUS	0474	0474	CE0426	

The number 0426 next to the CE mark refers to Registered Test Center nº 0426 ITALCERT, V.le Sarca, 336 - 20126 MILAN, authorized to run production checks according to art. 11.B D.e. 89/686/EEC only as regards products classified in category III (harness for SCUBA).



REFERENCES TO EN 250:2000 OBJECT - DEFINITIONS - LIMITS

- Object: The requirements and tests provided for in EN 250:2000 are aimed at providing a minimum safety level for the operating of diving breathing apparatuses at a maximum depth of 50 m / 165 feet.
- Scuba Definition (EN 132): Self-contained, open-circuit compressed air underwater breathing apparatus in an apparatus which has a portable supply of compressed air carried by the diver, allowing him to breathe underwater.
- Scuba Minimum equipment (EN 250:2000):
 - a) Air cylinder / cylinders.
 - b) Demand regulator.
 - c) Safety device, e.g. pressure gauge / computer or reserve or alarm.
 - d) Carrying frame or holding device for air cylinder(s) to mount the harness, or carrying system, e.g. backpack and/or straps, BC harness.
 - e) Facepiece: mouthpiece assembly or full face mask or diving helmet.
 - f) Operating instructions.
- Limits (EN 250:2000) Maximum depth: 50 m / 165 feet.
- SCUBA Component units (EN 250:2000): The SCUBA equipment may consist of separate component units such as cylinders, regulator and pressure gauge. The Mares BCs described in this manual may be used with any SCUBA components certified in compliance with EC directive 89/686. The air contained in the cylinders must comply with the requirements for herathable air set forth in EN 12021.

REFERENCES TO EN 1809 OBJECTS - DEFINITIONS - LIMITS

- Object: The EN 1809 directive examines the minimum safety requirements and the performance of inflatable buoyancy compensator vests.
- Buoyancy Compensator Vest Definition (EN 1809): A device allowing the diver to control his/her buoyancy during the dive.
- Limits: The object of the EN 1809 Standard does not cover the requirements for floating devices or safety Jackets. A buoyancy compensator vest is not intended to guarantee, on the surface, a head-up position to an unconscious or a temporarily disabled diver.

↑ WARNING

Read this manual carefully. The improper use of any diving equipment can result in serious injury or death. SCUBA diving equipment should be used by certified divers only. Professional training should be obtained exclusively from a certified instructor. For your protection, your equipment should be serviced by Mares or a MARES AUTHORIZED SERVICE CENTER. The BCs described in this manual have been tested and certified for temperatures between -20° C and $+60^{\circ}$ C.

IMPORTANT

Read the instructions carefully. The BC is not a life vest: it does not guarantee a head-up position of the diver on the surface. If the instruction manual is lost, it can be re-ordered from your Mares dealer. Before use, check for any air leaks and make sure all the components of the BC are working correctly. Connect the LP hoses to a Low Pressure port of the 1st stage BEFORE connecting the regulator to the tank. After use, rinse the inside and outside of the BC thoroughly with fresh water. This operation is particularly important after use in a swimming pool. Inadequate maintenance may result in damage to the BC or impair its

operation. Inflate the BC slightly before storing.

9

Technical characteristics	DRAGON AT MRS PLUS	PRESTIGE AT MRS PLUS	HYBRID AT MRS PLUS	KAILA AT MRS PLUS	
Туре	Dragon Aircell	Classic Aircell	Dragon Aircell	Dragon Aircell	
Inflator	Airtrim	Airtrim	Airtrim	Airtrim	
Sealing High frequency		High frequency	High frequency	High frequency	
Buoyancy bag material Nylon 420/Nylon 420		Cordura 1000/Nylon 420	Nylon 420/Nylon 420	Nylon 420/Nylon 420	
Backpack Vector		Vector	Foldable	Vector	
Maximum tank size	Single-tank set: min/max diameter 14.1/21.5 cm Max. Vol. 20 lt.	Single-tank set: min/max diameter 14.1/21.5 cm Max. Vol. 20 lt.	Single-tank set: min/max diameter 14.1/21.5 cm Max. Vol. 20 lt.	Single-tank set: min/max diameter 14.1/21.5 c Max. Vol. 20 lt.	
Weight (size L)	3.8 kg	4.2 kg	3.5 kg	3.6 kg	
M.R.S. PLUS	Х	χ	Χ	Х	
Trim Weight	X	Х	X	Х	
Twin exhaust valves	2	2	2	2	
Hand-operated valves	1	2	2	2	

SIZE CHART

MODEL	SIZE	WEIGHT	HEIGHT	WAIST CIRCUMFERENCE	CHEST CIRCUMFERENCE
DRAGON AT MRS PLUS	XS	<55	<165	70-90	<95
PRESTIGE AT MRS PLUS	S	50-70	165-175	75-95	85-105
HYBRID AT MRS PLUS	М	60-80	165-180	90-115	95-115
HIBRID AT MRS FE03	L	70-90	170-185	100-120	105-120
	XL	>80	>180	110-140	>120

MODEL	SIZE	WEIGHT	HEIGHT	WAIST CIRCUMFERENCE	CHEST CIRCUMFERENCE
KAILA AT MRS PLUS	XXS	<50	<160	65-85	<85
	XS	<50	<160	65-85	<85
	S	45-65	150-170	70-90	80-90
	М	50-70	165-175	80-105	85-95
		>60	>170	85-115	>90

LIFT CHART

MODEL	XXS	XS	S	М		XL
DRAGON AT MRS PLUS		140 N (14.2 kg/30.8 lbs)	140 N (14.2 kg/30.8 lbs)	180 N (18.3 kg/40.4 lbs)	200 N (20.3 kg/45 lbs)	240 N (24.5 kg/54 lbs)
PRESTIGE AT MRS PLUS		95 N (9.6 kg/21.3 lbs)	125 N (12.7 kg/27.9 lbs)	135 N (13.7 kg/30.2 lbs)	155 N (15.8 kg/34.8 lbs)	185 N (18.8 kg/41.4 lbs)
HYBRID AT MRS PLUS		140 N (14.2 kg/30.8 lbs)	140 N (14.2 kg/30.8 lbs)	200 N (20.5 kg/45.1 lbs)	200 N (20.5 kg/45.1 lbs)	240 N (24.5 kg/54 lbs)
KAILA AT MRS PLUS	140 N (14.2 kg/30.8 lbs)	160 N (16.3 kg/35.9 lbs)				



AIRTRIM

The BC inflator provides an exceptional new solution for controlling the inflow and outflow of air (Fig. 1).

Its innovative mechanism completely revolutionizes the ergonomics of using an inflator underwater.

In fact, on traditional BCs the inflator must be secured within easy reach by a retainer- but this does not always take place, making the inflator difficult to use.

The innermost end of the group is fitted with a quick coupling which can be manually detached in the event of a malfunction, to immediately shut off the flow of air.

EXHAUST VALVES

The BC deflation button actuates an innovative "Twin Exhaust Valve System". These valves release air simultaneously, regardless of the diver's underwater swimming position.

This makes it extremely easy to adjust the buoyancy.

This new sophisticated valve system overcomes the limitations of traditional inflators, which require a specific diver position to facilitate air discharge.

↑ WARNING

The "Twin Exhaust Valve System" allows the user to control the air discharge rate.

To obtain a quick air dump, press and hold down the OUT button. To obtain gradual deflation, press the OUT button lightly and repeatedly.

All models also feature at least one mechanical quick air dump valve, operated by a pull cord with a knob, that also functions as an over-expansion relief valve.

BUOYANCY BAG

First quality fabrics with multilayer polyurethane coating, sealed at high frequency, in a variety of styles to meet the needs of every diver.

SOFT GRIP

Neutrally buoyant padding specifically designed to provide unparalleled comfort and ensure maximum adherence between the wetsuit and the BC.

B.P.S. (Back Protection System)

A neutrally buoyant padding system that is both rugged and secure, thanks to a combination of materials with different mechanical properties. The capacity to absorb shocks is greatly superior to that of ordinary protection materials. What's more, the contoured cut and the special design of the seams ensure exceptional adherence between the wetsuit and BC.

M.R.S. PLUS

M.R.S. Plus represents the evolution of the first mechanical-release weight system introduced on the market. Incorporating a newly designed

buckle system, simply click the buckle in place for optimum security, one pull movement to release your weights.

ORAL INFLATION SYSTEM

The oral inflation system is located inside the pocket (Fig. 2), and consists of a small a silicone tube fitted with a check valve.

MATERIALS

- 1500 denier Cordura®, with triple polyurethane resin coating, extremely resistant to abrasion.
- 840 D nylon, with triple polyurethane coating, highly resistant to abrasion.
- High impact YKK® technopolymer zips.
- YKK® Velcro
- Stainless steel or technopolymer rings.
- Valves, buckles and rings constructed from high impact technopolymer, resistant to knocks and to aging.
- Shoulder straps with quick-release "thumbledge" buckles, which
 can be instantly adjusted using only the thumb, permitting easy,
 quick and precise fitting of the BC on different body types. The buckle
 adjustment straps are finished with pull-rings which ensure a secure
 qrip, even when wearing thick neoprene gloves.
- Quick-release waist strap with two-side adjustment.
- Adjustable quick-release chest buckle keeps the shoulder straps in the correct natural position and prevents them from slipping.
- Double seam construction using 100% polyester thread, for maximum durability.
- Practical swivel hose retainers ensure safe and optimal positioning of the octopus and console (Fig. 3).
- Dual-tone DIN safety whistle, unbreakable,

INSTRUCTIONS FOR USE

Before using the BC in open water conditions, carefully read the instructions for use provided in this manual, which can help ensure the life and safety of the equipment.

It is also recommended to try the BC in a swimming pool first, donning full gear as for an open water dive, in order to become acquainted with this equipment which retains the shape and working principle of the traditional BC. but is used in a different way.

One recommended shallow water exercise, for example, is to practice controlling buoyancy while pivoting on the fins. This simple move helps the diver become familiar with the "IN - OUT" inflation and deflation buttons, experiencing their air flow rate and - most importantly - their ease of use.

The purpose of a BC is to make diving easier by enabling the diver to maintain neutral buoyancy.

INTEGRATED WEIGHT SYSTEM

M.R.S. PLUS

M.R.S. Plus represents the evolution of the first mechanical-release weight system introduced on the market. It introduces a newly-designed buckle system: simply click the buckle in place for optimum security, and a single outward pull releases your weights. The interior is divided into multiple sections in the event you do not use the full capacity.

ASSEMBLING THE INTEGRATED WEIGHT

Open the zipper and insert the desired quantity of weights, up to a maximum of 6kg/13lbs for sizes M and bigger and 4kg/9lbs for sizes S and smaller in each weight pouch (Fig. 4).

When using a limited quantity of weights, close the Velcro (A) inside the pocket to prevent the weights from shifting during the dive (Fig. 5). Close the zipper.

INSTALLING THE MRS PLUS ONTO THE BC

Insert the M.R.S. Plus in the special housing inside the pocket of the deflated BC. Insert the male part of the buckle (A) of the M.R.S. Plus weight pouch into the female buckle (B) located inside the BC pocket, pressing until it clicks (Fig. 6).

Make sure that the mechanism of the male buckle (A) is perfectly fastened to the female buckle (B) (Fig. 7).

RELEASING THE MRS PLUS FROM THE BC

To release the M.R.S. Plus weight pouch from the BC, grasp the handle (C) of the M.R.S. Plus weight pouch (Fig. 8).

Pull the handle (C) forward firmly to detach the male buckle (A) from the female buckle (B), and then pull out the whole weight pouch (Fig. 9).

POCKETS

The BC pockets are of the bellows type for increased capacity and can be easily accessed with the opposite-side arm. Always remember to close the zip or the Velcro flap to avoid losing any objects contained in the pockets.

★ WARNING

USE OF BC POCKETS AS WEIGHT HOLDERS (TEARING POCKETS): the pockets are not designed to hold excessive weight. They are intended exclusively to contain small objects. Inserting weights, stones, or sharp or pointed objects is considered improper use and will consequently invalidate the warranty that we offer.

HIGH-VISIBILITY LOGOS

Silver-color bands and logos are attached on the BC; they are made of a highly reflective material to provide good visibility even when visibility is low in typical dim underwater environments.

The reflective logos are located, anteriorly, on the shoulder straps (bands) and, at the back, on the bladder [Mares logos].

∧ CAUTION

Due to its highly technical properties, the reflecting material requires a special and difficult attachment procedure. Be careful, in particular, to avoid scratching your BC against sand, rocks, stones etc..

Mares is not liable for partial or total detaching of these logos or parts thereof.

ADJUSTING THE BC

CUSTOMIZING THE FIT

Before the BC is used underwater, it must be adapted to the shape of the diver's body by making some adjustments.

If the cummerbund needs to be tightened or enlarged, remove it from both the left and right inner loops and then, using the adjusting strap with buckle, obtain the desired length by moving the Velcro-covered part backward or forward [Fig. 10].

After completing the adjustment, replace the cummerbund inside its loops and check the resulting fit, taking into account the thickness of the wetsuit and ensuring that the two sides are exactly symmetrical.

The cummerbund is correctly adjusted when the Velcro flaps overlap each other at the center of the diver's waist.

After obtaining the desired girth, use the quick-adjusting shoulder straps on the left and right side to finish customizing the fit.

PRF-DIVE INSPECTION

- Check that all fittings and valves are securely fastened and that the locking nuts are tightened.
- 2) Make sure that tank and backpack are properly connected (Fig. 11-12).
- Inflate the BC and wait for approximately 15 minutes. If the BC deflates at all, do not use it and bring it to a Mares Authorized Service Center for inspection.
- 4) Next, check the operation of the pneumatic inflation and deflation system by pressing the IN and OUT buttons.

Finally, check the oral inflation system using the silicone tube inside the pocket.

Fully extract the tube and blow into it to inflate the BC.

Replace its cap and correctly reposition the tube inside the pocket.



A WARNING

Your buoyancy compensator has been designed for use with the following tank sizes:

Diameter: Min. 14.1 cm. / 5.6 in.

Volume: Single tank set Max. 20 lt/4.4 gal.

Two-tank set Max. 2 x 10 lt./2.2 gal.

↑ WARNING

Any leakage of micro-bubbles does not indicate that the BC is losing pressure, but instead could be air that was trapped in spaces between the fabric fibers.

- 5) Operate the overpressure / rapid exhaust valve (Fig. 13) to be sure it is functioning properly.
- 6) Do not leave the BC in the sun and do not place or drag it on rough surfaces that might scrape or puncture it.

↑ WARNING

WHEN USING A BC WITH INTEGRATED WEIGHTS, ALWAYS SECURE THE UNIT TO A LINE IF YOU ARE PLANNING TO PUT ON THE BC IN THE WATER. THIS IS BECAUSE, IN CERTAIN CASES, THE SCUBA UNIT CAN BE NEGATIVELY BUOYANT EVEN WITH THE BC FULLY INFLATED.

↑ WARNING

Always soak the tank fastening straps before securing the BC to the SCUBA tank. Failure to do so could allow the tank to slip out of the BC strap, causing serious injury or death.

↑ WARNING

Remember to fully extract the oral inflation tube before blowing inside.

♠ WARNING

The rear pockets are sized to accommodate a maximum of 2kg/4lbs of weights each.

Refer to your instructor for information about how to make the most of this feature.

USING THE BC UNDERWATER

To begin the descent, there is no need to raise your left arm as with traditional BCs: simply press the OUT button on the inflator unit, or operate one of the mechanical quick air dump valves by pulling its cord.

During the descent, compensate for the progressive loss of buoyancy by pressing the "IN" button with your thumb to inflate the BC.

DURING THE ASCENT

To control the speed of ascent, it may be necessary to discharge some of the excess air.

Use the OUT button, pressing it briefly and repeatedly.

In the event of an excessively rapid ascent, a quick air dump can be obtained by holding down the OUT button.

↑ WARNING

When ascending, your buoyancy must be controlled to avoid too rapid an ascent when approaching the surface. For information concerning a safe rate of ascent, refer to a certified diving instructor or your diving manual. Follow your decompression table or diving computer during the whole ascent. Failure to make a slow, controlled ascent could lead to serious injury or death.

♠ WARNING

Do not use your BC to lift objects in the water. Should you drop the object, you could become too buoyant and your rate of ascent could become too rapid and potentially dangerous and serious injury or death could result.

ON THE SURFACE

After returning to the surface, inflate the BC to become positively buoyant.

♠ WARNING

A BC is not a safety jacket or personal floatation device and is not designed to keep the diver on the surface with head up should he/she become unconscious.

END OF DIVE

Loosen the tank strap and remove the BC.

Completely discharge the air contained in the BC by pulling one of the mechanical quick air dump valves.

Check that there is no water inside the BC.

Discharge any water as follows:

- fully inflate the BC:
- position it to allow the water to flow into the front bag (Fig. 14):
- turn the BC over so that the mechanical quick air dump valve is facing downward and discharge the water by pulling the valve cord (Fig. 15).

Before storing the BC for prolonged periods, it is advisable to rinse the interior as follows:

- unscrew the rear mechanical quick air dump valve;
- fill the bag approximately a quarter full with fresh water through the valve opening;

- inflate the BC and shake it from side to side to circulate the water:
- allow the water to flow out through the valve opening:
- allow to dry completely:
- reassemble the valve.

MAINTENANCE

↑ WARNING

Do not use solvents or detergents for the cleaning and maintenance procedures. If any malfunctions or leaks are observed, always take the equipment to an authorized service center to avoid invalidating the product warranty.

Proper maintenance will ensure long and trouble-free life to your BC.
For that reason, it is essential for you to follow the instructions listed below:

- 1) Avoid prolonged exposure to direct sunlight.
- 2) Do not leave any pointed or hard objects in or around the BC.
- Store the BC only when completely dry. Store partially inflated in a cool, dry and dark place.
- At the end of every open water or swimming pool dive, always rinse your BC inside and out with fresh water.
- 5) Rinse thoroughly all hardware and accessories on the BC.

FREE-FLOW OF INFLATOR UNIT

In the event of the inflator unit free-flowing, the AIRTRIM makes it possible to immediately shut off the air flow.

Place your right hand on the rear part of the inflator unit and release the quick coupling of the hose (Fig. 16).

To inflate the BC, it will then be necessary to use the oral inflation system housed inside the pocket.

FREQUENCY OF CHECKS

It is recommended that you have your BC checked once a year by an Authorized Mares Support Center.

STORAGE

Before storing your BC, rinse it with fresh water and drain the water from the bag. Leave to dry completely, and then inflate slightly and place in a dry location out of the sun.

USE OF THE BCS WITH OXYGEN RICH MIXTURES

↑ WARNING

This product was designed for use with air or with Nitrox up to a maximum of 40% oxygen. The use of mixes with oxygen concentrations higher than 40% and/or the addition of helium can cause damage or deterioration and compromise the proper functioning of the BC.

♠ WARNING

FOR NORTH AMERICA ONLY

FUR NURTH AMERICA UNL

Mares regulators, alternative second stages, and gas delivery components are designed for and compatible with open circuit SCUBA using compressed air or enriched air (Nitrox) mixtures not exceeding 40% Oxygen ONLY.

These limits conform to the DAN Nitrox Industry Workshop Proceedings of November, 2000.

Failure to follow this warning may result in SERIOUS INJURY or DEATH to the user due to fire, explosion, or the deterioration or failure of the equipment.

WHEN REPAIR OR SERVICING IS REQUIRED, THIS SHOULD BE PERFORMED ONLY BY MARES OR BY A MARES AUTHORIZED SERVICE CENTER.











J























Mares S.p.A. Salita Bonsen, 4 16035 Rapallo - Italy Tel. +39 01852011 Fax +39 0185201470

www.mares.com

